
Pencil catch dusts on the base of print and device

Gel cleaners pencil type

- This tool removes wastes and dusts by adhesive of special urethane gel.
- Glues are not left on the base of print and device by making use of self-adhesive.
- It does not damage to tip and device for soft materials.
- It can be used repeatedly by washing even if stained.
- Nib keep clean until you get because it packed in cleanroom.

Catch wastes and dusts with pinpoint.

Gel cleaners pencil type

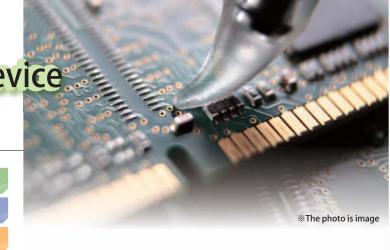



○ Install nib to penholder after taking out from bag. • Choose nib type to match for use. • Pat parts of the dusts are worried and catch the alien substance. • This alien substance copy to cleaner base(Optional), or wash out by water. *Please nib patting, not draging. If you drag, nib may shave and appear wastes.

ixed • Cleat • Antivibratid

Consists of 4 Cleaner Pencils, Transfer sheet, and Original box.

4 Gel Cleaner Pencils set





They are in an original box that keep conveniently.

◄How to take out Push the handle end to keep the urethane side clean

Available from one piece(top part only) Gel Cleaner pencils Nib spares



Number	Name	Pencil Point
PEN-RS	Gel Cleaner spares	Round
PEN-VS		Pen-shaped
PEN-HS		Paddle-shaped
PEN-SS		Square

Adhesive sheets in the original box transfer the dirt of nib Cleaner Base



Number	Name	Size (Original box)
PEN-CB	Cleaner Base	50×50mm

○ Dirt removed by a Pencil Cleaner can be transferred on to the more adhesive Cleaner Base , and keep nib clean.

Dirt of Cleaner Base is washable for using repeatedly.